

**BLUETOOTH
WATERPROOF
PORTABLE SPEAKER**



**AKTIV SOUNDS
CBT11 SPEAKER**

USER MANUAL

Powering CBT11 On / Off

Press and Hold the POWER button for 2 seconds to power ON. You will hear an audible tone. You will hear another audible tone and a white LED will flash quickly to indicate that it is powered on and searching for a Bluetooth source to pair with.

To power the speaker off, press and hold the POWER button for 2 seconds to power off.

NOTE: The speaker will automatically power off after several minutes if the Bluetooth connection is not paired with a device.

NOTE: An additional battery icon will appear next to the Bluetooth icon at the top right of your phone/tablet's screen, indicating the speaker's battery level. This is compatible only with certain devices.

Connecting CBT11 via Bluetooth

Once powered on, the speaker will automatically enter pairing mode. Go into your phone/tablet's Bluetooth settings and enable Bluetooth. Next, enter the Bluetooth device list and select **Coleman_CBT11**. After selected, wait a few seconds for the pairing to complete. Once the pairing is successful, you will hear an audible tone from the speaker and a solid white LED will light up. To connect the speaker with a different Bluetooth device press and hold the MODE button for 2 seconds. The speaker will disconnect from the current device and will be able to pair with a new device.

NOTE: The CBT11 will automatically connect to a previously paired device if the paired device's Bluetooth radio is powered, enabled and within range.

Linking another CBT11 for True Wireless Sound

The CBT11 includes True Wireless Stereo (TWS) technology. This enables you to link two speakers to emit a true left / right stereo sound.

Power on both speakers. Make sure neither speaker is connected to a Bluetooth device. Double press the MODE button on one speaker, you will hear an audible tone from the speaker and the white LED will flash quickly. Once connected, this speaker will now be the master speaker and will be the left channel.

Once the two speakers are paired together the white LED on the master speaker will flash quickly and the white LED on the slave will stay lit. Now connect your Bluetooth device to the master speaker. Once connected the white LED will stay lit.

When linked, they work together as a true left and right stereo speaker; splitting the audio

signal to the correct channels. Pressing any button on one speaker will control both speakers.

To disconnect from TWS press and hold the MODE button on either speaker.

Playing Music from a Memory Card

If you want to play music off a memory card, simply insert the memory card with music loaded into the slot on the side of the speaker. The speaker will automatically enter that mode. The speaker controls will work as normal. Simply remove the memory card to exit that mode.

Controlling the Sound on Your CBT11

PLAY / PAUSE

Tap the POWER button.

VOLUME UP / DOWN

Tap the **+** button to increase the volume and tap the **-** button to decrease the volume.

FORWARD / BACKWARD TRACK

Press and hold the **+** button for 2 seconds to skip a track forward. Press and hold the **-** button for 2 seconds to go to the previous track.

ANSWER / END PHONE CALL

Tap the POWER button.

DECLINE PHONE CALL

Press and hold the POWER button for 2 seconds.

NOTE: For best performance and clarity, operate the CBT11 within an arm's length. Ensure that the microphone faces your direction.

Charging your CBT11

Open the watertight sealed door, and simply plug the included microUSB cord into the microUSB port at the base of the speaker. Once plugged in, the LED will light up red. It will turn off once the internal battery is fully charged.

Preserving the Waterproof Seal

Ensure that the side compartment door is fully pushed in. This will prevent any dust and moisture from entering the USB and AUX ports.

Suction Cup Mounting

Please follow these instructions when mounting your speaker using the included suction cup. The suction cup can only be mounted on flat surfaces. The suction might not work on

Answering or Making Calls

If there is an incoming call on your paired phone/tablet, the music will pause and the ringer will ring through the CBT11 speaker. To answer a call, simply press the POWER button.

To end a call, simply press the POWER button. Press and hold the POWER button for 2 seconds to decline a phone call.

surfaces that have heavy texture or ridges. Before mounting, make sure the suction cup and the surface are completely dry, the suction cup will not work when wet or on wet surfaces. When mounting, line the speaker up to where you want it mounted then press the speaker firmly onto the surface. To release the suction after it's mounted, simply lift any edge of the suction cup, this will break the seal.

NOTE: the suction cup and mounting surface must be clean and dry to ensure a proper seal. To clean the suction cup simply remove it from the speaker then use soap and warm water to clean it. Once it is completely dry, reattach it to the speaker.

Factory Reset

If you are experiencing connectivity issues, you may need to perform a hard reset on your CBT11. To do so, power off the speaker then press and hold the POWER button for 8 seconds. An audible tone will sound, followed by

the LED flashing white. Once reset successfully, the LED indicator will flash every second and will enter pairing mode.

Specifications


Bluetooth Version: 5.0
Built-in Lithium-Ion Battery: 3.7V, 800mAh
Charging Voltage: 5V
Speaker: 45mm 4Ω 3W x 1
Frequency: 120Hz-18KHz
Distortion: ≤5%
Effective Distance: 10M
Waterproof Grade: IPX7

*Elite Brands Inc., 40 Wall Street, 61st Floor
New York, NY 10005 · Tel: 1-800-441-1100*

www.colemanoptics.com

*Coleman, , , are registered trademarks of
The Coleman Company, Inc. used under license*

©2021 The Coleman Company, Inc.

*The  **Bluetooth**™ word mark and logos are registered trademarks
owned by the Bluetooth SIG, and any use of such marks
by Elite Brands Inc. is under license. Other trademarks and
trade names are those of their respective owners.*