

**BLUETOOTH
WATERPROOF
PORTABLE SPEAKER**



AKTIV SOUNDS
CBT60 SPEAKER

USER MANUAL

Powering CBT60 On / Off

Press and Hold the POWER button for 4 seconds to power ON. You will hear an audible tone. The speaker will automatically enter Bluetooth Mode and a blue LED will flash quickly to indicate that it is powered on and searching for a Bluetooth source to pair with.

To power the speaker off, press the POWER button to power off.

NOTE: The speaker will automatically power off after several minutes if the Bluetooth connection is not paired with a device.

NOTE: An additional battery icon will appear next to the Bluetooth icon at the top right of your phone/tablet's screen, indicating the speaker's battery level. This is compatible only with certain devices.

Connecting CBT60 via Bluetooth

Once powered on, the speaker will automatically enter pairing mode. Go into your phone/tablet's Bluetooth settings and enable Bluetooth. Next, enter the Bluetooth device list and select **Coleman_CBT60**. After selected, wait a few seconds for the pairing to complete. Once the pairing is successful, you will hear an audible tone from the speaker and the indicator ring LED will stay solid blue.

To forget the last paired device press and hold the TWS button, this will allow you to connect a new Bluetooth device to the speaker.

NOTE: The CBT60 will automatically connect to a previously paired device if the paired device's Bluetooth radio is powered, enabled and within reachable distance.

Linking another CBT60 for True Wireless Sound

The CBT60 includes True Wireless Stereo (TWS) technology. This enables you to link two speakers to emit a true left / right stereo sound.

To connect two speakers over TWS make sure both speakers are powered on and disconnected from any Bluetooth devices. Press the TWS on both speakers, an audible tone will be heard from both speakers. The TWS button will flash slowly while the TWS is pairing. Once the two speakers are connected you will hear another audible tone and the TWS button will stay lit. Once the two speakers are connected, follow the steps to connect your Bluetooth device to the speaker.

To disconnect from TWS simply press the TWS button. Once TWS connection is made

between two speakers they will automatically connect over TWS the next time they are powered on and within range. To forget the last TWS pairing press and hold the TWS button, this will forget the last TWS and Bluetooth connection.

Playing Music from a Memory Stick

If you would like to listen to music loaded on a Memory Stick, simply power on the speaker and insert a Memory Stick into the USB port on the back of the speaker. Be sure that music is in MP3 format and is stored in the root of the Memory Stick's directory. Memory Stick mode will automatically start playing upon inserting a Memory Stick. The speaker controls will function as normal.

Listening to FM Radio

To listen to FM Radio, simply turn on the speaker and press the MODE button to enter FM Radio mode. While in Radio mode, press

and hold the PLAY/PAUSE button to auto search for an FM Radio station and to store it automatically. Press and hold the PLUS button to go to the next stored station, press and hold the MINUS button to go to the previous stored station. Press the PLUS or MINUS button to increase and decrease the volume. Press the PLAY/PAUSE button to mute the speaker.

Connecting CBT60 via Auxiliary Input

If you would like to use a device that is not equipped with Bluetooth technology, simply connect the **included** auxiliary 3.5mm cable from your device to the Aux-In input at the back of the CBT60. Bluetooth audio will mute while a 3.5mm cable is plugged in. While connected via Auxiliary, the only controls that will function on the speaker is the PLAY/PAUSE button. All other functions are controlled from the connected device.

Controlling the Sound on Your CBT60

PLAY / PAUSE

Tap the PLAY/PAUSE button.

VOLUME UP / DOWN

Press the **+** button to increase the volume and press the **-** button to decrease the volume.

FORWARD / BACKWARD TRACK

Press and hold the **+** button to skip a track forward. Press and hold the **-** button to go to the previous track.

ANSWER / END PHONE CALL

Tap the PLAY/PAUSE button.

DECLINE PHONE CALL

Press and hold the PLAY/PAUSE button.

Answering or Making Calls

If there is an incoming call on your paired phone/tablet, the music will pause and the ringer will ring through the CBT60 speaker. To answer a call, simply press the PLAY/PAUSE button.

While on the call, press and hold the PLAY/PAUSE button to switch the call from the speaker to your connected device. To end a call, simply press the PLAY/PAUSE button.

To decline a phone call press and hold the PLAY/PAUSE button.

NOTE: For best performance and clarity, operate the CBT60 within an arm's length. Ensure that the microphone faces your direction.

Siri/Google Assistant Controls

If your connected Bluetooth device has Siri or Google Assistant then you can activate these features using the SMART ASSISTANT button.

Press the SMART ASSISTANT button to activate your connected device's smart assistant.

Charging your CBT60

Open the watertight sealed door, and simply plug the included USB C cord into the USB C port at the base of the speaker. The port is labeled **DC 5V**. Once plugged in, the LED will light up red. It will turn off once the internal battery is fully charged.

Preserving the Waterproof Seal

Ensure that the back compartment door is fully pushed in. This will prevent any dust and moisture from entering the USB and AUX ports.

LED Lighting Control

The LED lighting around the passive subs are automatically turned on when you power on the speaker. To turn them off press and hold the

MODE button, press and hold the MODE button again to turn them back on.

Factory Reset

If you are experiencing connectivity issues, you may need to perform a hard reset on your CBT60. To do so, push the reset button under the door on the back of the speaker.

Specifications

Bluetooth Version: 4.2

Built-in Lithium-Polymer Battery: 3.7V, 6000mAh

Charging Voltage: 5V

Speaker: 50mm 4Ω 7W x 2

Frequency: 100Hz-20KHz



Distortion: ≤0.1%


Effective Distance: 10M

Waterproof Grade: IPX6

*Elite Brands Inc., 40 Wall Street, 61st Floor
New York, NY 10005 · Tel: 1-800-441-1100*

www.colemanoptics.com

*Coleman, ,  are registered trademarks of
The Coleman Company, Inc. used under license
©2021 The Coleman Company, Inc.*

*The  **Bluetooth**[™] word mark and logos are registered trademarks
owned by the Bluetooth SIG, and any use of such marks
by Elite Brands Inc. is under license. Other trademarks and
trade names are those of their respective owners.*