

CONQUEST³
ACTION CAMERA



CX14WP Conquest3 User's Manual

OPERATING GUIDE

1. Inserting / Removing a Memory Card

Ensure the camera is powered off. Insert a MicroSD card into the MicroSD card slot. The MicroSD card can only be inserted one way. Do not force it through. Once successfully inserted, it will click in. To remove, simply push the card in for it to pop out.

2. Inserting / Removing the Battery

- a. Remove the battery cover by pinching the small tab inward and pull up.
- b. The battery is purposely shaped so that it can be inserted only one way. Follow the shape of battery compartment before inserting.
- c. To remove the battery, first power the camera off. Remove the battery cover. The battery is easily removed by pulling on the black plastic pull tab.

3. Charging the Battery

- a. Connect the included USB cable's small end into the camera's USB input, and the larger end in to the AC adapter. The LED will illuminate in red and will automatically turn off once the battery is fully charged.
- b. You may use the camera for recording or playback while it is plugged into auxiliary power (AC Adapter, computer, mobile charger).
- c. For the quickest charge, please ensure that the camera is powered off.

4. Power On / Off

- a. Ensure that the battery is fully charged.
- b. Press and hold the power button for 3 seconds until the camera powers on. Press the power button again for 3 seconds to power off.

5. Enabling / Disabling WIFI

- a. Enabling WiFi: Press the UP directional key briefly. The LED light will flash in yellow and the screen will display the WiFi details.
- b. Disabling WiFi: Once the WiFi is enabled, press the UP directional key briefly. The yellow LED light will no longer illuminate.

6. Changing Modes

The power button also functions as the MODE button. Once the camera is powered on, tap the power button to cycle between Recording Video / Shooting Photographs / Slow-Motion Video / Burst Photo / Playback / Settings.

7. LED Light Color Statuses

Blue LED: The camera is busy processing an image or video.

Yellow LED : WiFi is enabled. When flashing yellow, the WiFi is waiting to connect; when solidly lit, WiFi is connected.

Red LED: The battery is charging.

8. Recording Video

Once powered on, the camera automatically enters VIDEO mode. Press the ENTER key to begin recording. The bottom of the screen will show a flashing red dot, denoting that video is recording. Press the ENTER key again to stop recording.

9. Shooting Photographs

Once powered on, tap the POWER button again to enter PHOTO mode. Press the ENTER key to shoot a photo. The upper left corner of the screen will show that you are in PHOTO mode.

10. Shooting Slow Motion Video

Once powered on, tap the POWER button twice to enter SLOW MOTION VIDEO mode. Press the ENTER key to begin recording. The bottom of the screen will show a flashing red dot, denoting that video is recording. Press the ENTER key again to stop recording.

11. Playback on Camera


Once powered on, tap the POWER button to cycle through the modes until you enter PLAYBACK mode.

Press the UP and DOWN directional buttons to cycle through your media. Press ENTER to playback a video file. Press and hold the ENTER button for 3 seconds to delete a single file.

12. Connecting to a Computer

- a. Connect your camera to a computer with the included USB cable. Power the camera on and the following prompts will display.
- b. Select "Mass Storage" and press the ENTER button to continue.
- c. Go to Start -> My Computers-> and find the removable disk. Your camera acts like a card-reader when connected and can be easily accessed this way. Your media will be stored in a folder on this removable disk. Copy the folder to your computer.

13. Connecting to a Smartphone

- a. Before using the WiFi function, you must install the XDV app on your smartphone.
- b. Please search in the Apple Store or Google Play Store for the XDV app. The icon will appear like so: 
- c. Power up your camera and press the UP directional key to initialize the WiFi. Your camera screen will show the WiFi details.

Smartphone Operation

- a. Once the WiFi is initiated on your camera, go to the WiFi settings on your smartphone and search for "COLEMAN".
- b. The password is 12345678.
- c. Once the camera's network is successfully connected to your smartphone's WiFi, open up the XDV app to connect to your camera. You can preview the shooting screen, remote shutter/record, file playback, download, delete and share your files.



The XDV App can be found in the Apple App Store or Google Play Store. For easier searching, scan this QR code with your smartphone.



Video Mode

To record video, ensure the camera is powered on and in **VIDEO** mode.

To begin recording:

Press the **ENTER** button. The camera will emit a *beep* sound and the status LED will blink while recording.

To stop Recording:

Press the **ENTER** button again. The camera will emit another *beep* sound and the status LED will no longer illuminate.



Photo Mode

Ensure the camera is in **PHOTO** mode by tapping the **POWER** button.

To capture a photo:

Press the **ENTER** button. The camera will emit a *shutter* sound.



Burst Mode

Ensure the camera is in **BURST PHOTO** mode by tapping the **POWER** button.

To start burst photos:

Press the **ENTER** button. The camera will emit *shutter* sounds for each photo.



Time Lapse Series

Ensure the camera is in **TIME LAPSE** mode by tapping the **POWER** button, and verify that *continuous lapse* is enabled in the settings menu.

To start a time lapse series:

Press the **ENTER** button. The camera initiates a countdown and will emit a *shutter* sound for each photo that is captured.


■ CAMERA OVERVIEW



LED INDICATOR
CHARGING INDICATOR

DISPLAY

DOWN
UP
SPEAKER

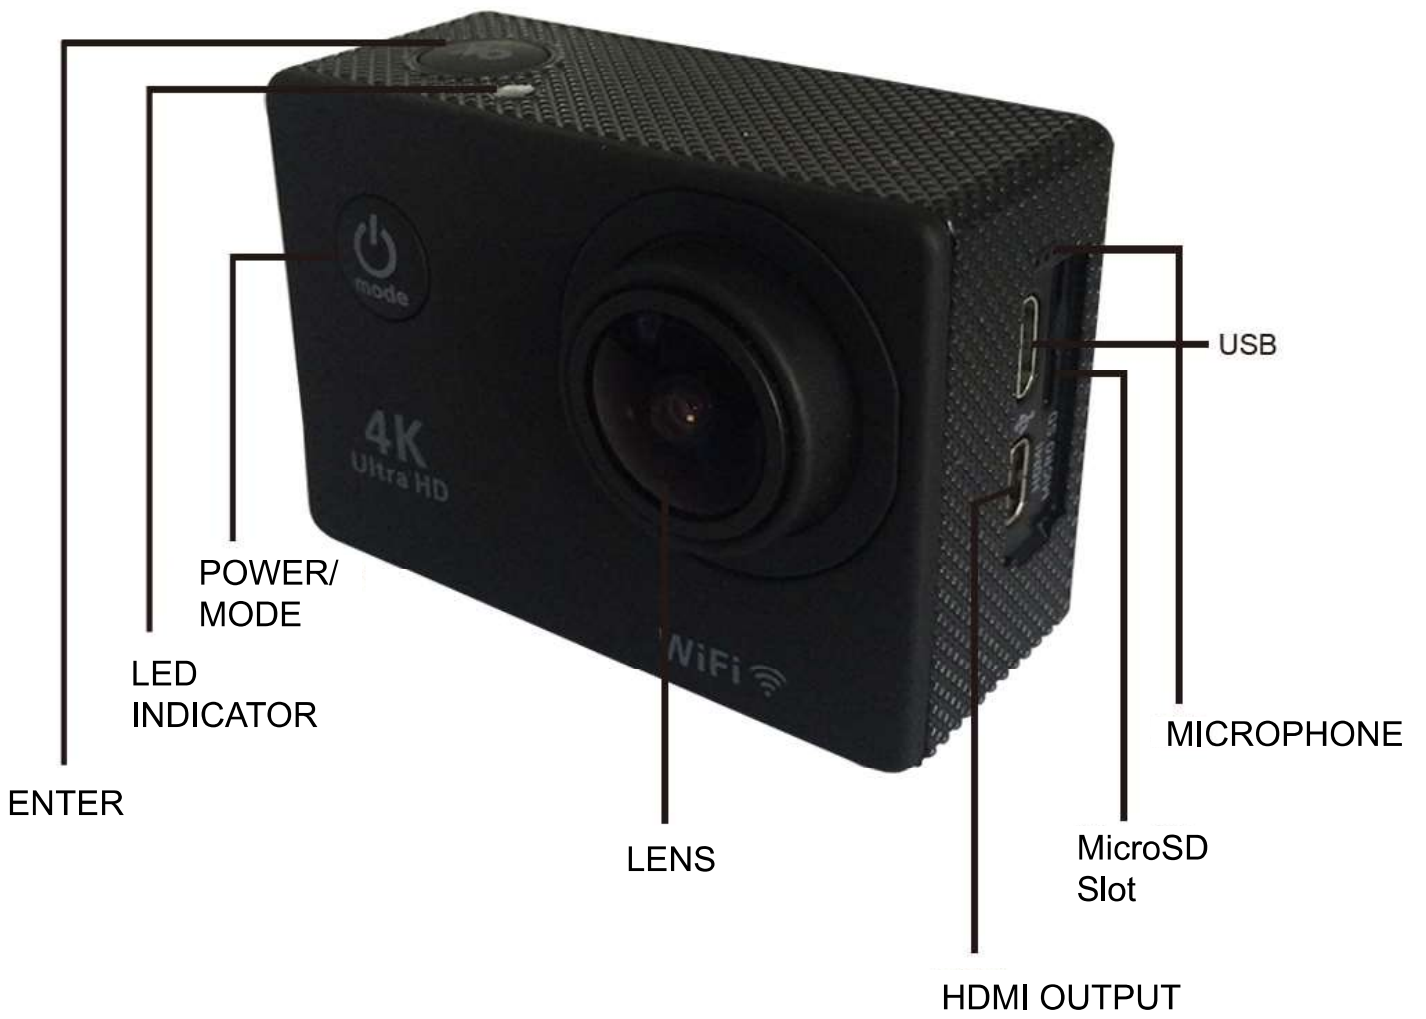

■ WATERPROOF CASE OVERVIEW



ACCESSORIES OVERVIEW



Waterproof Housing



Handle Bar/Pole Mount



Clip 1



Mount 1



Mount 2



Mount 3



Mount 4



Bandages



Adhesives



USB Cable



Battery



Manual



Mount2

+



Mount1

+



+



Waterproof Housing

=



Camera

+



=





Handle Bar/Pole Mount

+



Mount3

+



Waterproof Housing

=



Camera

+



Clip

=



2.4G REMOTE



Photo Button

Video Button

2.4G
Remote
Splashproof

Remote Distance: 10m/33ft

TECHNICAL SPECIFICATIONS

LCD Screen	2.0" 230k HD LTPS
Front Lens	170 Degrees Wide-Angle
Sensor Resolution	8.0 Mega Pixels CMOS
Optional Languages	English, Spanish, French, German, Italian, Portugese, Dutch, Thai, Japanese, Polish, Simplified Chinese, Traditional Chinese, Korean, Russian
Video Resolution	4k30fps / 2.7k30fps / 1080p60fps / 720p120fps / 720p60fps / 720p30fps
Video File Format	MP4
Video Compression Format	H.264
Photo Resolution	16 Mega Pixels / 12 Mega Pixels / 8 Mega Pixels / 5 Mega Pixels / 2 Mega Pixels
Photo File Format	JPG
Storage Format/Capacity	MicroSDXC up to 64GB
Video Recording Modes	Normal / Timing / Automatic / Sports Trail
Photo Recording Modes	Normal / Loop / Slow Motion
Slow-Motion Video	1080p60fps / 720p120fps
Light Frequency	Auto / 50Hz / 60Hz
Interfaces	USB 2.0 / Mini HDMI
Power Adaptor	5V / 1A
Battery	S009, 3.7v 900mAh, 3.33Wh
Recording Time	1080p and WiFi Connected - 90 minutes
Dimensions	59 x 41 x 29mm
Weight	44g (58g with battery installed)
Operating Temperature	-10 Degrees~+55 Degrees Celcius
Storage Temperature	-20 Degrees~+70 Degrees Celcius
Waterproof Case Depth	30 meters / 100 feet
Remote Control Distance	10 meters / 33 feet

www.colemanoptics.com
Coleman, ,  are registered trademarks of
The Coleman Company, Inc. used under license.
© 2017 The Coleman Company, Inc.

*Elite Brands Inc., 40 Wall Street, 61st Floor
New York, NY 10005 • Tel: 1-800-441-1100*